


- GETTING READY TO INSTALL DOOR UNIT
- FINISHING AND MAINTENANCE

## PREPARE THE OPENING

### SQUARE


Make sure rough opening is square. Rough opening should be no less than 1/2" wider and 1/4" taller than outside dimension of frame.

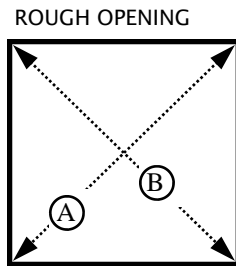

SQUARE:  
LINE A = LINE B


### PLUMB

Jamb must be plumb and straight. Use plumb bob or level to check that top of jamb is not tipped in or out in relation to bottom. Door will not seal evenly along weatherstrip.

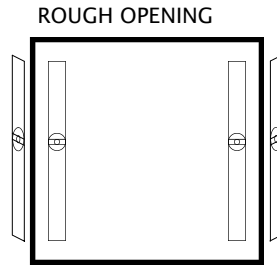

### SUB-FLOOR FLAT, LEVEL

Sub-flooring under door must be flat, level, and smooth. Failure to ensure this may result in improper operation of the door and water & air infiltration.

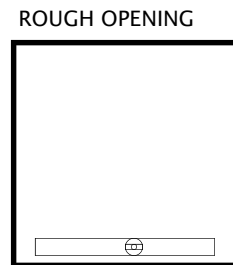

## FINISHING INSTRUCTIONS

INSTALLATION OF THIS PRODUCT IS NOT COMPLETE UNTIL ALL EXPOSED WOOD SURFACES HAVE BEEN SEALED. FAILURE TO DO SO WILL RESULT IN POOR PERFORMANCE, INTRUSION OF MOISTURE INTO THE WOOD FIBER, AND DETERIORATION OF THE PRODUCT.

FAILURE TO PROPERLY FINISH THIS PRODUCT WITHIN 30 DAYS OF INSTALLATION MAY VOID THE WARRANTY.

EXPOSED WOOD SURFACES INCLUDE:

- ALL FOUR EDGES OF EACH DOOR PANEL
- INSIDE OF LOCK ROUTES, ROLLER POCKETS (SLIDING DOORS)

USE ONLY HIGH QUALITY MATERIALS THAT SEAL THE WOOD.

REGULAR REFINISHING MAY BE NECESSARY TO PREVENT MOISTURE INTRUSION INTO WOOD FIBER.

**FAILURE TO INSTALL AND FINISH DOOR UNITS PROPERLY  
WILL VOID WARRANTY.**