


PARK VUE PRIMED PATIO DOOR


MULL KIT FOR MAKING TRIPLE UNIT FROM TWO PANEL SLIDING UNIT AND SIDELIGHT UNIT

- | | |
|----------------------|---|
| KIT INCLUDES: | |
| 1 | PRIMED HEAD CASING FOR TRIPLE UNIT |
| 1 | PRIMED VERTICAL MULL STRIP CASING |
| 1 | PRIMED REPLACEMENT EXTERIOR HEAD STOP FOR SIDELIGHT (1/8" LONGER) |

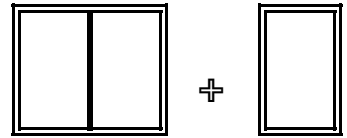

INSTRUCTIONS

1. REMOVE HEAD BRICKMOULDING FROM BOTH UNITS.
2. REMOVE ONE SIDE BRICKMOULD FROM EACH JAMB THAT WILL BE MULLED TOGETHER.
3. AFTER THE FRAMES HAVE BEEN ASSEMBLED PER INSTRUCTIONS ACCOMPANYING UNITS APPLY SEALANT ALONG THE OUTSIDE PERIMETER OF THE FACE OF ONE OF THE JAMBS TO BE MULLED TOGETHER (SEE DASHED LINE BELOW). THIS WILL KEEP WATER FROM PENETRATING AROUND THE JAMB.
4. SET FRAMES INTO OPENING PER INSTRUCTIONS.
5. ONCE FRAME IS SECURED IN OPENING APPLY AND NAIL THE HEAD BRICKMOULDING FROM MULL KIT TO TOP OF UNIT. THE BOTTOM OF THE HEAD BRICKMOULDING SHOULD BE FLUSH WITH THE BOTTOM FACE OF THE HEADER.
6. APPLY THE WOOD VERTICAL MULL STRIP OVER THE SEAM WHERE THE UNITS ARE MULLED TOGETHER. THE EDGE (SIDE WITH GROOVE) OF THE MULL STRIP SHOULD SET BACK 1/8" FROM FACE OF JAMB.
7. APPLY THE VINYL SCREEN CHANNEL FROM THE BRICKMOULDING THAT WAS REMOVED TO THE HEAD AND SIDE OF THE TWO PANEL UNIT.
8. COMPLETE ASSEMBLY OF DOOR AND INSTALLATION OF PANELS PER INSTRUCTIONS.

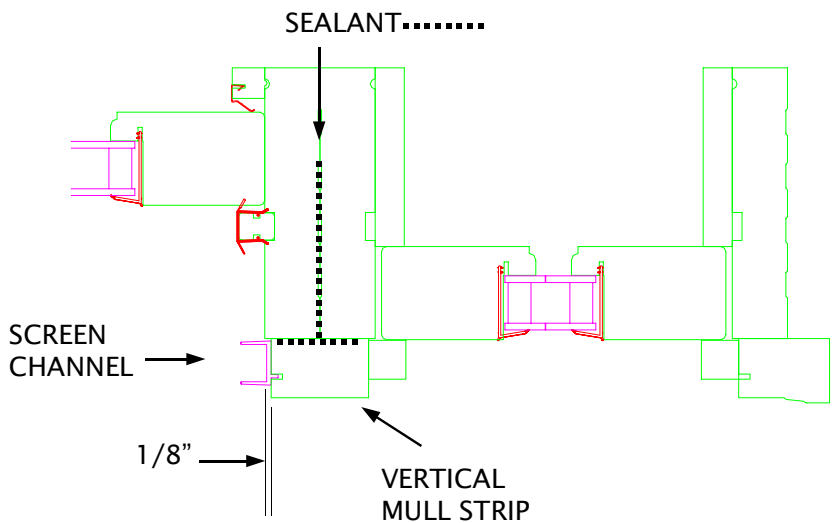

HEAD BRICKMOULD LENGTH (TIP-TO-TIP)

SP5 + SPSL2/6	93-1/2"
SP6 + SPSL3	111-1/2"
SP8 + SPSL4	147-1/2"

PP5 + PPSL2/6	102-1/2"
PP6 + PPSL3	120-1/2"
PP8 + PPSL4	156-1/2"

VERTICAL MULL STRIP LENGTH

SP	79-7/16
PP	81-7/16

MULL JAMB SECTION PRIMED SLIDING DOOR